


**A510AHN English Manual**

# **MP3 Player**

## **User Manual**

Thank you for choosing our MP3 player. Please read this instruction carefully before use. Please keep it properly for your reference

## ● Overview

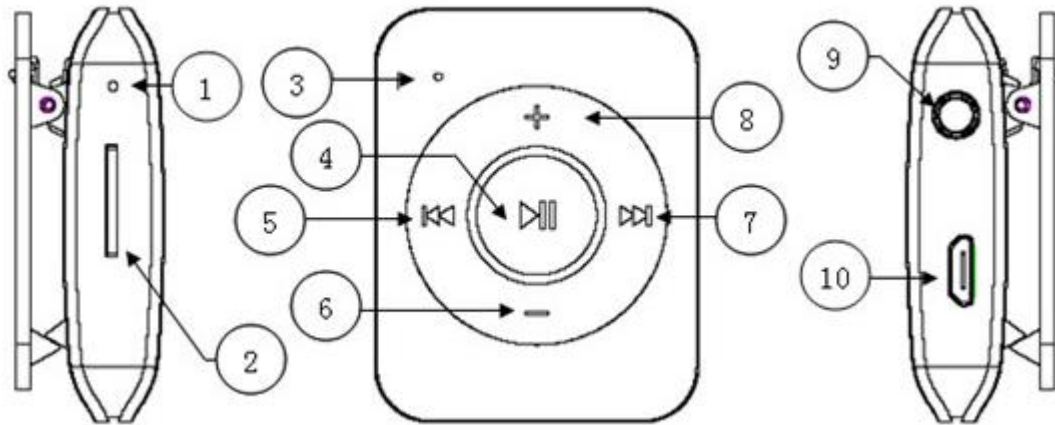

1. RESET    2. TF Card TSlot    3. Indicator light    4. Power key /Play/Pause  
 5. Backward/last track    6. Volume-    7. Forward/next track  
 8. Volume+    9. Earphone jack    10. USB Jack

### Basic Function and Operation

- ON/OFF  
 Power key ►||: Long press ►|| to turn on/off.

## ● LED Indicate Definition:

Status	LED Indicate
1.Power off status	Red & blue LED light are off.
2.Music playing, change next song or last song	Blue LED blinks.
3.Connect to PC for data transmission	Red LED long light and blue LED blinks.
4.Power on status, pause	Blue LED long light
5.Connect to PC, but doesn' t transmit data	Blue LED keeps on, red LED blinks.
6.Connect to adaptor for charging	Red LED blinks, blue LED keeps on.
7.Fast forward/backward	Blue LED keeps on.
8.Full charged	Red, blue LED keep on.

**Attention:** The player will automatically shut down when battery is low. No reaction if pressing any buttons when it is powered off. Please charge the player in time.

## ● Play/Pause

Start up the player and press ►|| to play music, blue LED blinks.

Under music playing status, press ►|| to pause it.

Under music pause status, press ►|| to continue play.

Long press►|| more than 3 seconds, red and blue LED blink alternately and shut down.

## ● RESET

When operating the player normally but without any reaction, please press power key to

restarting the device.

Remark:1. When it is paused, the player will be auto powered off for saving power if no operation within one minutes.

## ● Files Chosen

Under music playing status, press ►► to play next track.

Under music playing status, press ◀◀ to play previous track.

## ● Fast Forward/Fast Backward

Under music playing status, long press ►► to fast-forward play a file.

Under music playing status, long press ◀◀ to fast-backward play a file.

## ● Volume Adjusting

Under music playing status, press + to turn up the volume.

Under music playing status, press - to turn down the volume.

## ● USB Communication

Connect the player with PC through USB port and enter into USB communication status.

Find the mobile disc on PC and can operate writing and reading.

## ● Battery Charge

Connect the player with PC through USB port and can charge for it.

The player has overcharge protection function and use Timing Charge Management. While charging, Blue LED keeps on and red LED blinks. Blue and red LED both keeps on when battery is fully charged. If connect the player to PC again when battery is fully

charged and hasn't been used, red LED will continue blink. It's normal phenomenon and has no effect to player service life.