

HOTT A602 User Manual

Digital Media Player



Thanks for purchasing our MP3 media player. Please read this Manual carefully before using the product and keep it for future reference.

Contents

Precautions

Product Outlook

1.1 Function Keys.....
1.2 Basic Operations.....
2. Main Menu.....
2.0 Music.....
2.1 Play.....
2.2 Submenu Items.....
2.0 Record.....
2.1 Record Setup.....
3.0 Voice.....
4.0 Radio.....
4.1 Radio Setup.....
5.0 System Setup.....
6.0 Text.....
6.1 Text Menu Option.....
7. TECHNICAL SPECIFICATION.....
8.0 Troubleshooting.....


Precautions

This Manual provides important precautions and operating instructions. Please read this Manual carefully before using the product, in order to avoid any accident.

- Do not use the product in any high-temperature, humid or dusty place, in order not to shorten its service life.
- Do not drop or violently impact the product. Do not violently shake the LTPS screen, or it may be damaged or fail to work properly.
- Do not set too high a volume when using the earphone. If you suffered from tinnitus, Please lower the volume level or stop using the earphones
- Do not disconnect the player when it is being formatted or uploading or downloading any data, or there could be a program error.
- Do not disassemble the product without permission. Do not use any alcohol, diluents or benzene to clean the product surface.
- Do not use the product where no electronic device is allowed to use, like on the plane.
- Do not use the product while driving or walking on the street, in order to avoid any accidents.
- The system software will take up a part of the memory capacity, so the capacity available is less than the actual one.
- This product is not damp-proof or waterproof.
- No one except a professional repairman is allowed to replace the battery, as an improper replacement may cause the battery to explode.

Product Outlook

1. Earphone Jack
2. USB jack
3. RESET
4. Menu/Center button
5. Backward
6. Play/Pause/Turn ON/Turn OFF
7. Forward
8. Volume
9. TF card slot

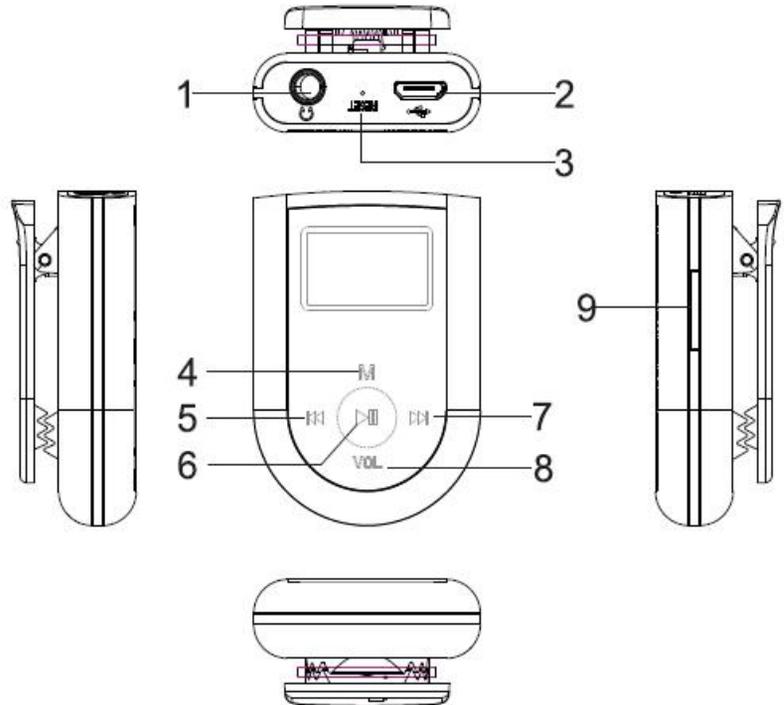

1.1 Function Keys

1. Power ON/OFF: long press centre button to turn on or to turn off the player.
2. Volume: short press VOL button, then press  to reduce the volume, or press  to increase the volume.
3.  Forward: select the right menu at the main interface.
4.  Backward: select the left menu at the main interface.
5. Menu: confirm.
6.  Play/Pause/Turn on/Turn off: short press it to switch between “play” and “pause”; Long press it to turn on or turn off the player;

1.2 Basic Operations

● Power On/Off

Power on: Long press  to turn on or turn off the player;

Power off: Long press  to turn off the player;

(In case of low power, the player will be auto off.)

● Connection to PC and Data Transmission

Start your computer, and then use the built-in USB interface to connect the digital media player to your computer for the purpose of USB power supply or USB data transmission. When the player is connected to your computer, it can act as a USB Flash Drive.

● Charging

Please charge the player under the following conditions:

- a) The battery icon appears as .

b) The player is auto off, and auto off again soon after it is restarted.

Charging steps:

Insert the attached charger into the power socket, and then connect it to the built-in USB interface of the digital media player. When the battery icon at the top right corner appears as “”, charging is finished.

Note:

1. It is normal that both the charger and digital media player will get warmer in charging.
2. This player is powered by a rechargeable Li-ion battery. The battery must be charged for at least 3 hours in case of exhausted power during the first couple of times, in order to ensure its service life.
3. The battery power duration depends on the volume level, file type, etc.
4. Do not use a charger of any other type to charge this digital media player, or we shall not be held responsible for any damage to the player. If you need an original charger for this player, please contact our dealer.

2. Main Menu

2.0 Music

Press  or  to select Music at the main interface as shown in the figure below:



Press **【M】** to enter the Music interface. Press  to play the selected song.

Long press **【M】** at the Music interface to return to the main interface.

2.1 Play

-
- a) Press **⏮** or **⏭** to select Music at the main interface.
 - b) Press **【M】** to enter the Music interface. Press **⏸** to play the selected song.
 - c) Press **⏮** or **⏭** at the Music interface to select the previous or next song.

2.2 Submenu Items

2.21 At the Pause Interface

Press **【M】** at the pause interface to enter the submenu containing such items as **Local folder, Card folder, Delete file, Delete all, Exit.**

- a) Press **⏮** or **⏭** to select Local folder and then press **【M】** to enter the song lists.
- b) Press **⏮** or **⏭** to select Delete file and then press **【M】** to delete the selected file.
- c) Press **⏮** or **⏭** to select Delete All and then press **【M】** to enter another main interface. Choose YES or NO as per your needs.
- d) Press **⏮** or **⏭** to select Exit and then long press **【M】** to exit to the Music interface.

2.22 At the Playing Interface

Press **【M】** at the playing interface to enter the submenu containing such items as Repeat, Equalizer, Replay, Replay times, Replay gap, Exit.

1. Press **⏮** or **⏭** to select Repeat and then press **【M】** to submenu, then choose repeat mode you want.
2. Press **⏮** or **⏭** to select Equalizer and then press **【M】** to submenu, then choose EQ Mode you want.
3. Press **⏮** or **⏭** to select Replay and then press **【M】** to start replay mode
4. Press **⏮** or **⏭** to select Replay times and then press **【M】** to submenu, Press **⏮** or **⏭** to reduce or increase replay times.
5. Press **⏮** or **⏭** to select Exit and then press **【M】** to exit to the Music interface.
6. Long press **【M】** to return to the Main interface.

2.0 Record

1. Press **⏪** or **⏩** to select Recorder at the main interface as shown in the figure below:



Recorder

2. Press **【M】** to enter the Recorder interface. Press **▶||** to start recording or pause, and then long press **【M】** to save the voice file and return to the main interface.

2.1 Record Setup

1. Press **【M】** at the recording interface to enter the submenu containing such items as Local folder, Card folder, Record type, Exit.
2. Press **⏪** or **⏩** to select Local folder and then press **【M】** to enter submenu.
3. Press **⏪** or **⏩** to select Card folder and then press **【M】** to enter submenu.
4. Press **⏪** or **⏩** to select Record type and then press **【M】** to enter submenu.
Choose 32K BPS or 64K BPS.
5. Press **⏪** or **⏩** to select Exit and then press **【M】** to exit to the Music interface.

3.0 Voice

1. Press **⏪** or **⏩** to select Voice at the main interface as shown in the figure below:



Voice

2. Press **【M】** to enter the Voice interface and press **▶||** to play the voice file.

4.0 Radio

1. Press **◀◀** or **▶▶** to select Radio at the main interface as shown in the figure below:



iRadio

2. Press **【M】** to enter the Radio interface as shown in the figure below, and then press **◀◀** or **▶▶** to select Manual Search:

4.1 Radio Setup

1. Press **【M】** at the Radio interface to enter the Radio Setup interface containing such items as **Save**, **Record**, **Delete**, **Delete All**, **Auto Search**, **Normal Band**, **Japan band** and **Exit**.

Save: Save the current radio station.

Record: After choosing this option, you could enter recording mode. The instruction is the same as below in the Extras part for Record.

Delete: Delete the current radio station from the saved radio stations.

Delete All: Delete all saved radio stations.

Auto search: After choosing the option, press **【M】** to return to the radio interface to start the auto tuning of radio

stations. When a program is searched, the system will save the radio station automatically and the interface will show CH01, CH02 and so on. Press Centre Key to switch among the saved radio stations.

Normal Band: Frequency band ranges from 87 MHz to 108 MHz.

Japan Band : Frequency band ranges from 76 MHz to 90 MHz.

Exit : choose this option to return to the previous interface.

2.Long press **【M】** at the Radio interface to return to the main interface.

5.0 System Setup

Press **⏪** or **⏩** to select System Setup at the main interface as shown in the figure below:



System Setup

Press **【M】** to enter the System Setup interface.

5.1 Backlight

Screen Savers: choose from 0 to 30.

5.2 Language

The player supports 24 languages.

5.3 Power off

Off time: The user can set a countdown (minute), allowing the player shut down automatically when the time is up. Setup Range: 0~30 minutes. Setup Step: 5 minutes. The device would Power off automatically after idle for the time limit, Except USB \Record\FM\Text autopl原因ing\Music playing modes.

Sleep time: The player will be turned off automatically if there are no any operations within the time. Setup Range: 0~120 minutes. Setup Step: 10 minutes. The device would Power off automatically after idle for the time limit, This setting is for all mode except the USB automatically according to your setting time.

5.4 Contrast

Set contrast for the display.

5.5 Memory info

Show the percentage of the total memory space and the used space of the main disk of the player or the SD card. Press ◀◀ or ▶▶ to switch between the two disks' memory information.

5.6 Firmware version

Show the information of firmware version.

5.7 Factory default

Choose factory default and press [ok], you can recover the factory menu default set up.

5.8 Exit

Return to the main interface of the system setup.

6.0 Text

Press Press ⏪ or ⏩ to select Text at the main interface as shown in the figure below:



Text

Press **[M]** to enter the Text interface. Press ⏪ or ⏩ to select [Text] in the main menu. Press ⏪ or ⏩ to select the file. Press Centre Key to play.

6.1 Text Menu Option

In the text file list interface, press [M] to enter Submenu 1. Submenu options include: **Local folder, Card folder, Play Set, Delete file, Delete All and Exit**. The functions and operation methods of other menu options are the same as the Photo applications.

7. TECHNICAL SPECIFICATION

- Black and white LCD screen: 128*64
- High-speed USB 2.0: High-speed USB 2.0
- Support TF Card: 1GB-16GB
- Lithium Battery: 120mah
- Play time: 4.5hrs
- Recording Format: WAV (32/64/128/256 K bps)
- Maximum Earphone output: (L) 5mW+ (R) 5mW (32Ohm)
- MP3 Bit Rate: 8K~384K bps
- WMA Bit Rate: 32K~384K bps
- Frequency Response: 20Hz to 20KHz
- Signal-to-noise Ratio: 60dB
- Distortion: 0.1%
- Receiving Frequency Range: 87.5MHz– 108.0MHz

8.0 Troubleshooting

If the player does not work properly, check the followings:

1. The player can not be powered on.

Please check if the battery has run out. Try to turn on the player again after it has been connected to USB or charger to make charging.

2. No sound from earphone.

Please make sure the volume is not at setting 0 and the earphone is well connected.

3. Serious noise.

Please make sure the earphone is clean. If audio file is damaged, it will show different noise or can not be played. So please make sure the file is completed

4. Bad action of FM receipt signal.

Please adjust the direction and position of the player, and lengthen the earphone line. Please check whether there are other electronically products interferences.

5. Unreadable code

Please make sure you have chosen the right language. Please turn off the player and start again

6. Cannot upload/download files.

Make sure the connection between the player and PC is correct.

Check if the memory is full.

Check if the USB connecting line is damaged.